 


Toilet




- Your best choice if you are unsure of the original part
- Just look for the UNIVERSAL "FIT-ALL™" on package as shown


Tank Repair

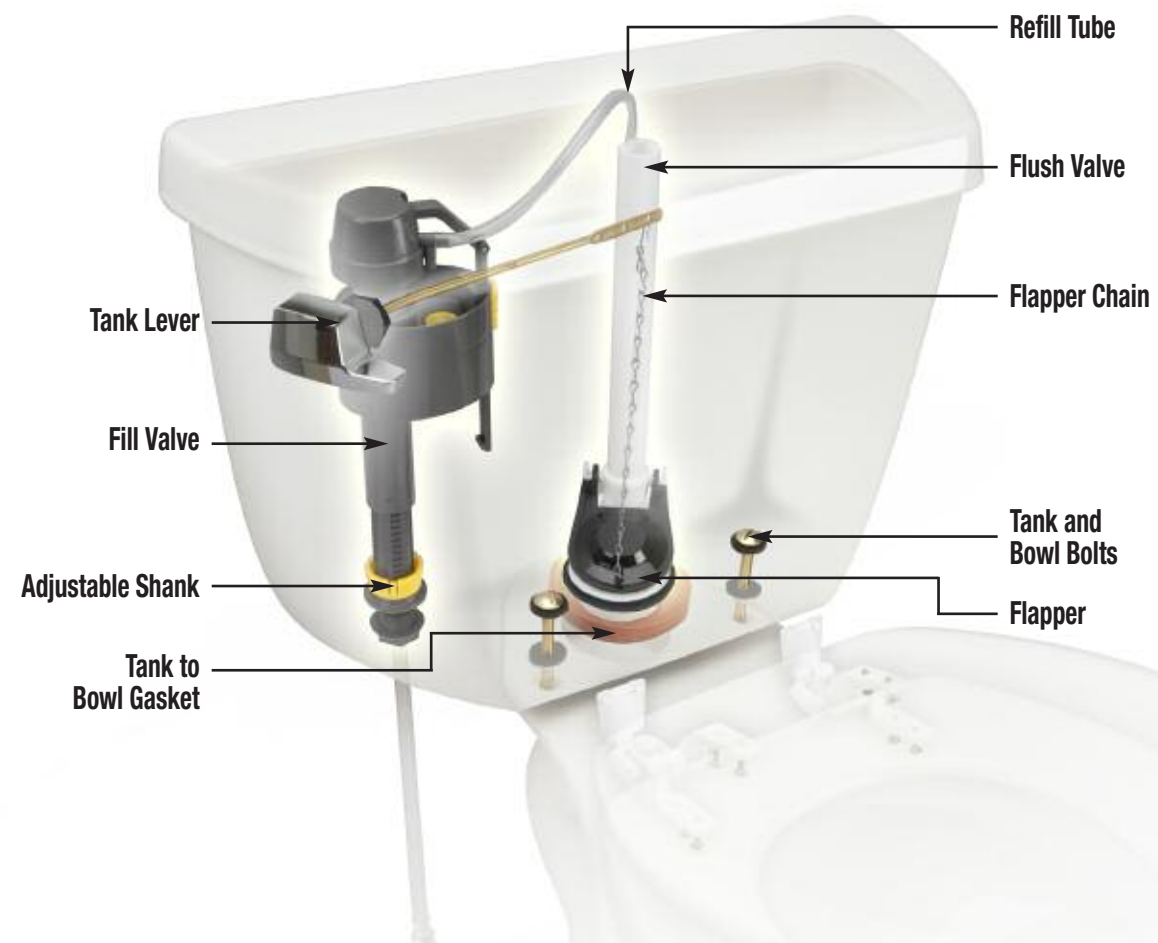

Bowl Repair

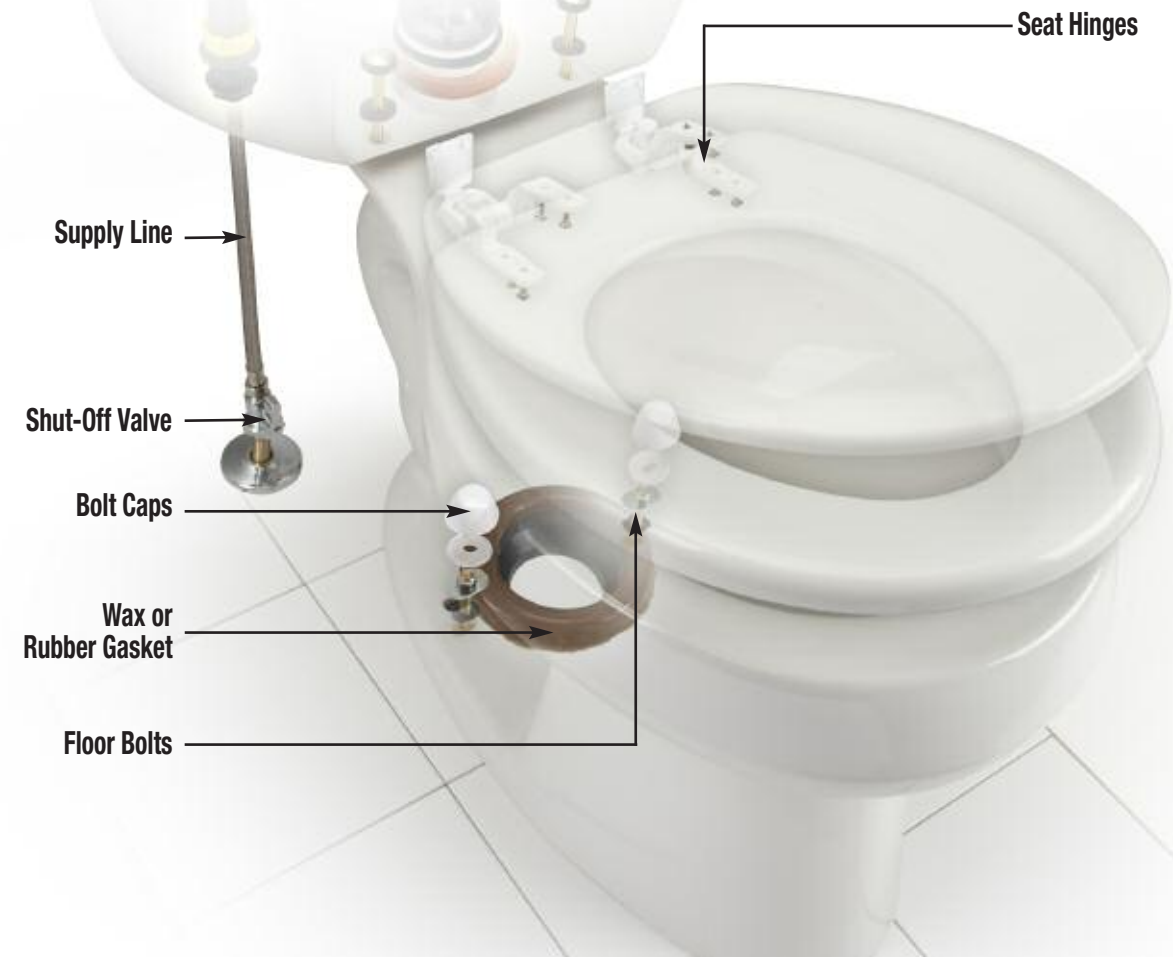

Fill Valve

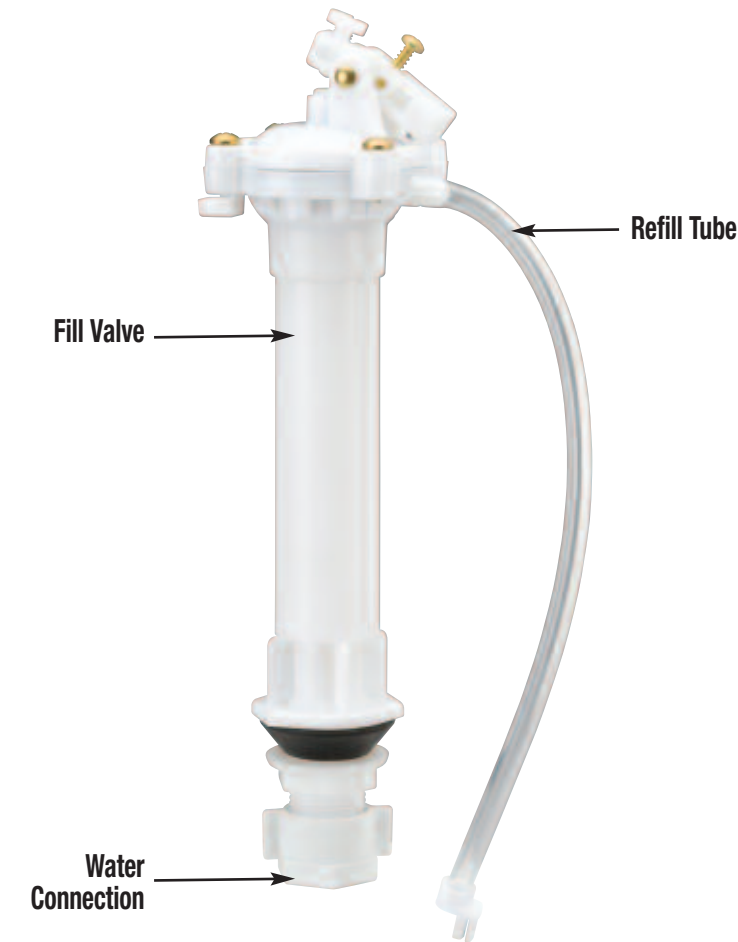

Flush Valve


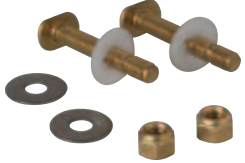
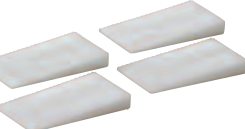









Toilet



- Your best choice if you are unsure of the original part
- Just look for the UNIVERSAL "FIT-ALL™" on package as shown

Problem	Cause	Solution
 Water leaks between tank and bowl	Worn tank to bowl gasket	 Replace toilet tank to bowl gasket and bolts
 Water leaks between bowl and floor	Worn or damaged wax or sponge seal	 Replace wax or rubber gasket and bolts

Problem	Cause	Solution
 Toilet bowl wobbles	Broken floor bolts or screws	Replace bolts or screws 
	Floor is uneven	Insert shims between bowl and floor 
 Toilet is noisy	Fill valve not working properly	Replace fill valve 

Problem	Cause	Solution
	Worn flapper	Replace flapper 
	Worn seat disc	Replace fill valve and/or flapper 
	Worn tank ball	Replace tank ball 
	Fill valve diaphragm or plunger may be worn	Replace diaphragm or plunger 
	Water level set too high	Adjust fill valve capscrew until water level is 1" below overflow tube 